



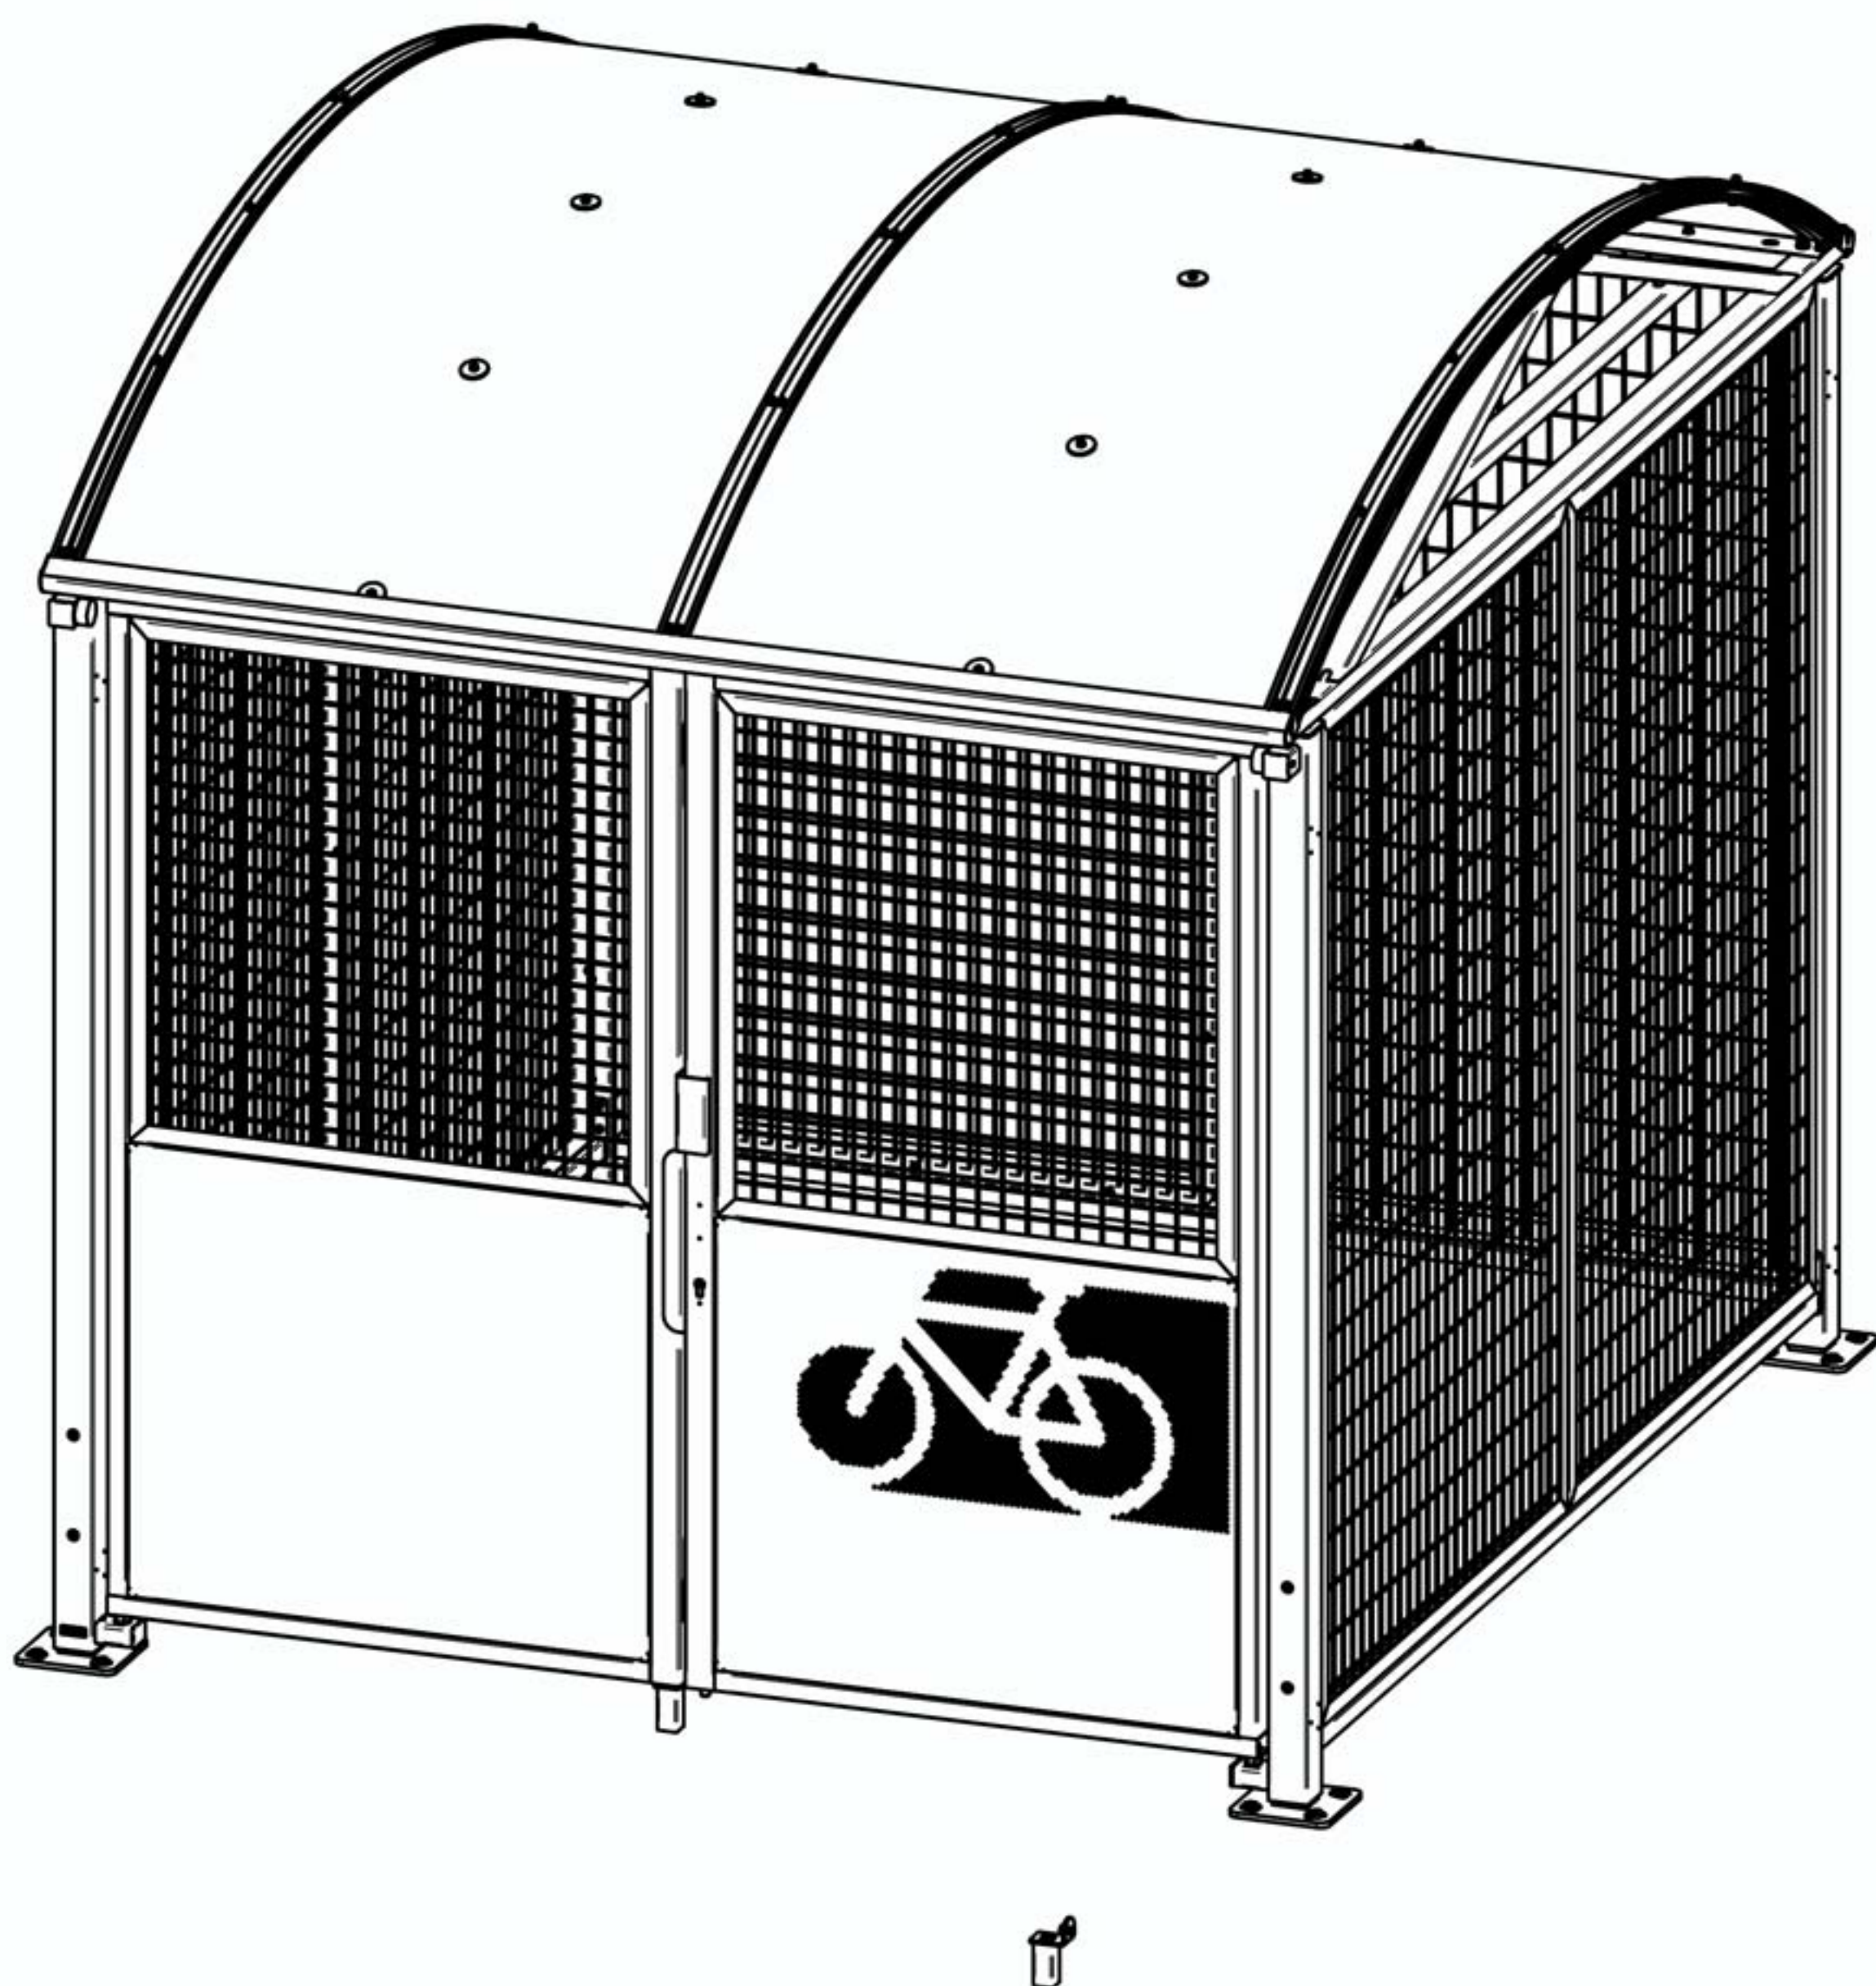
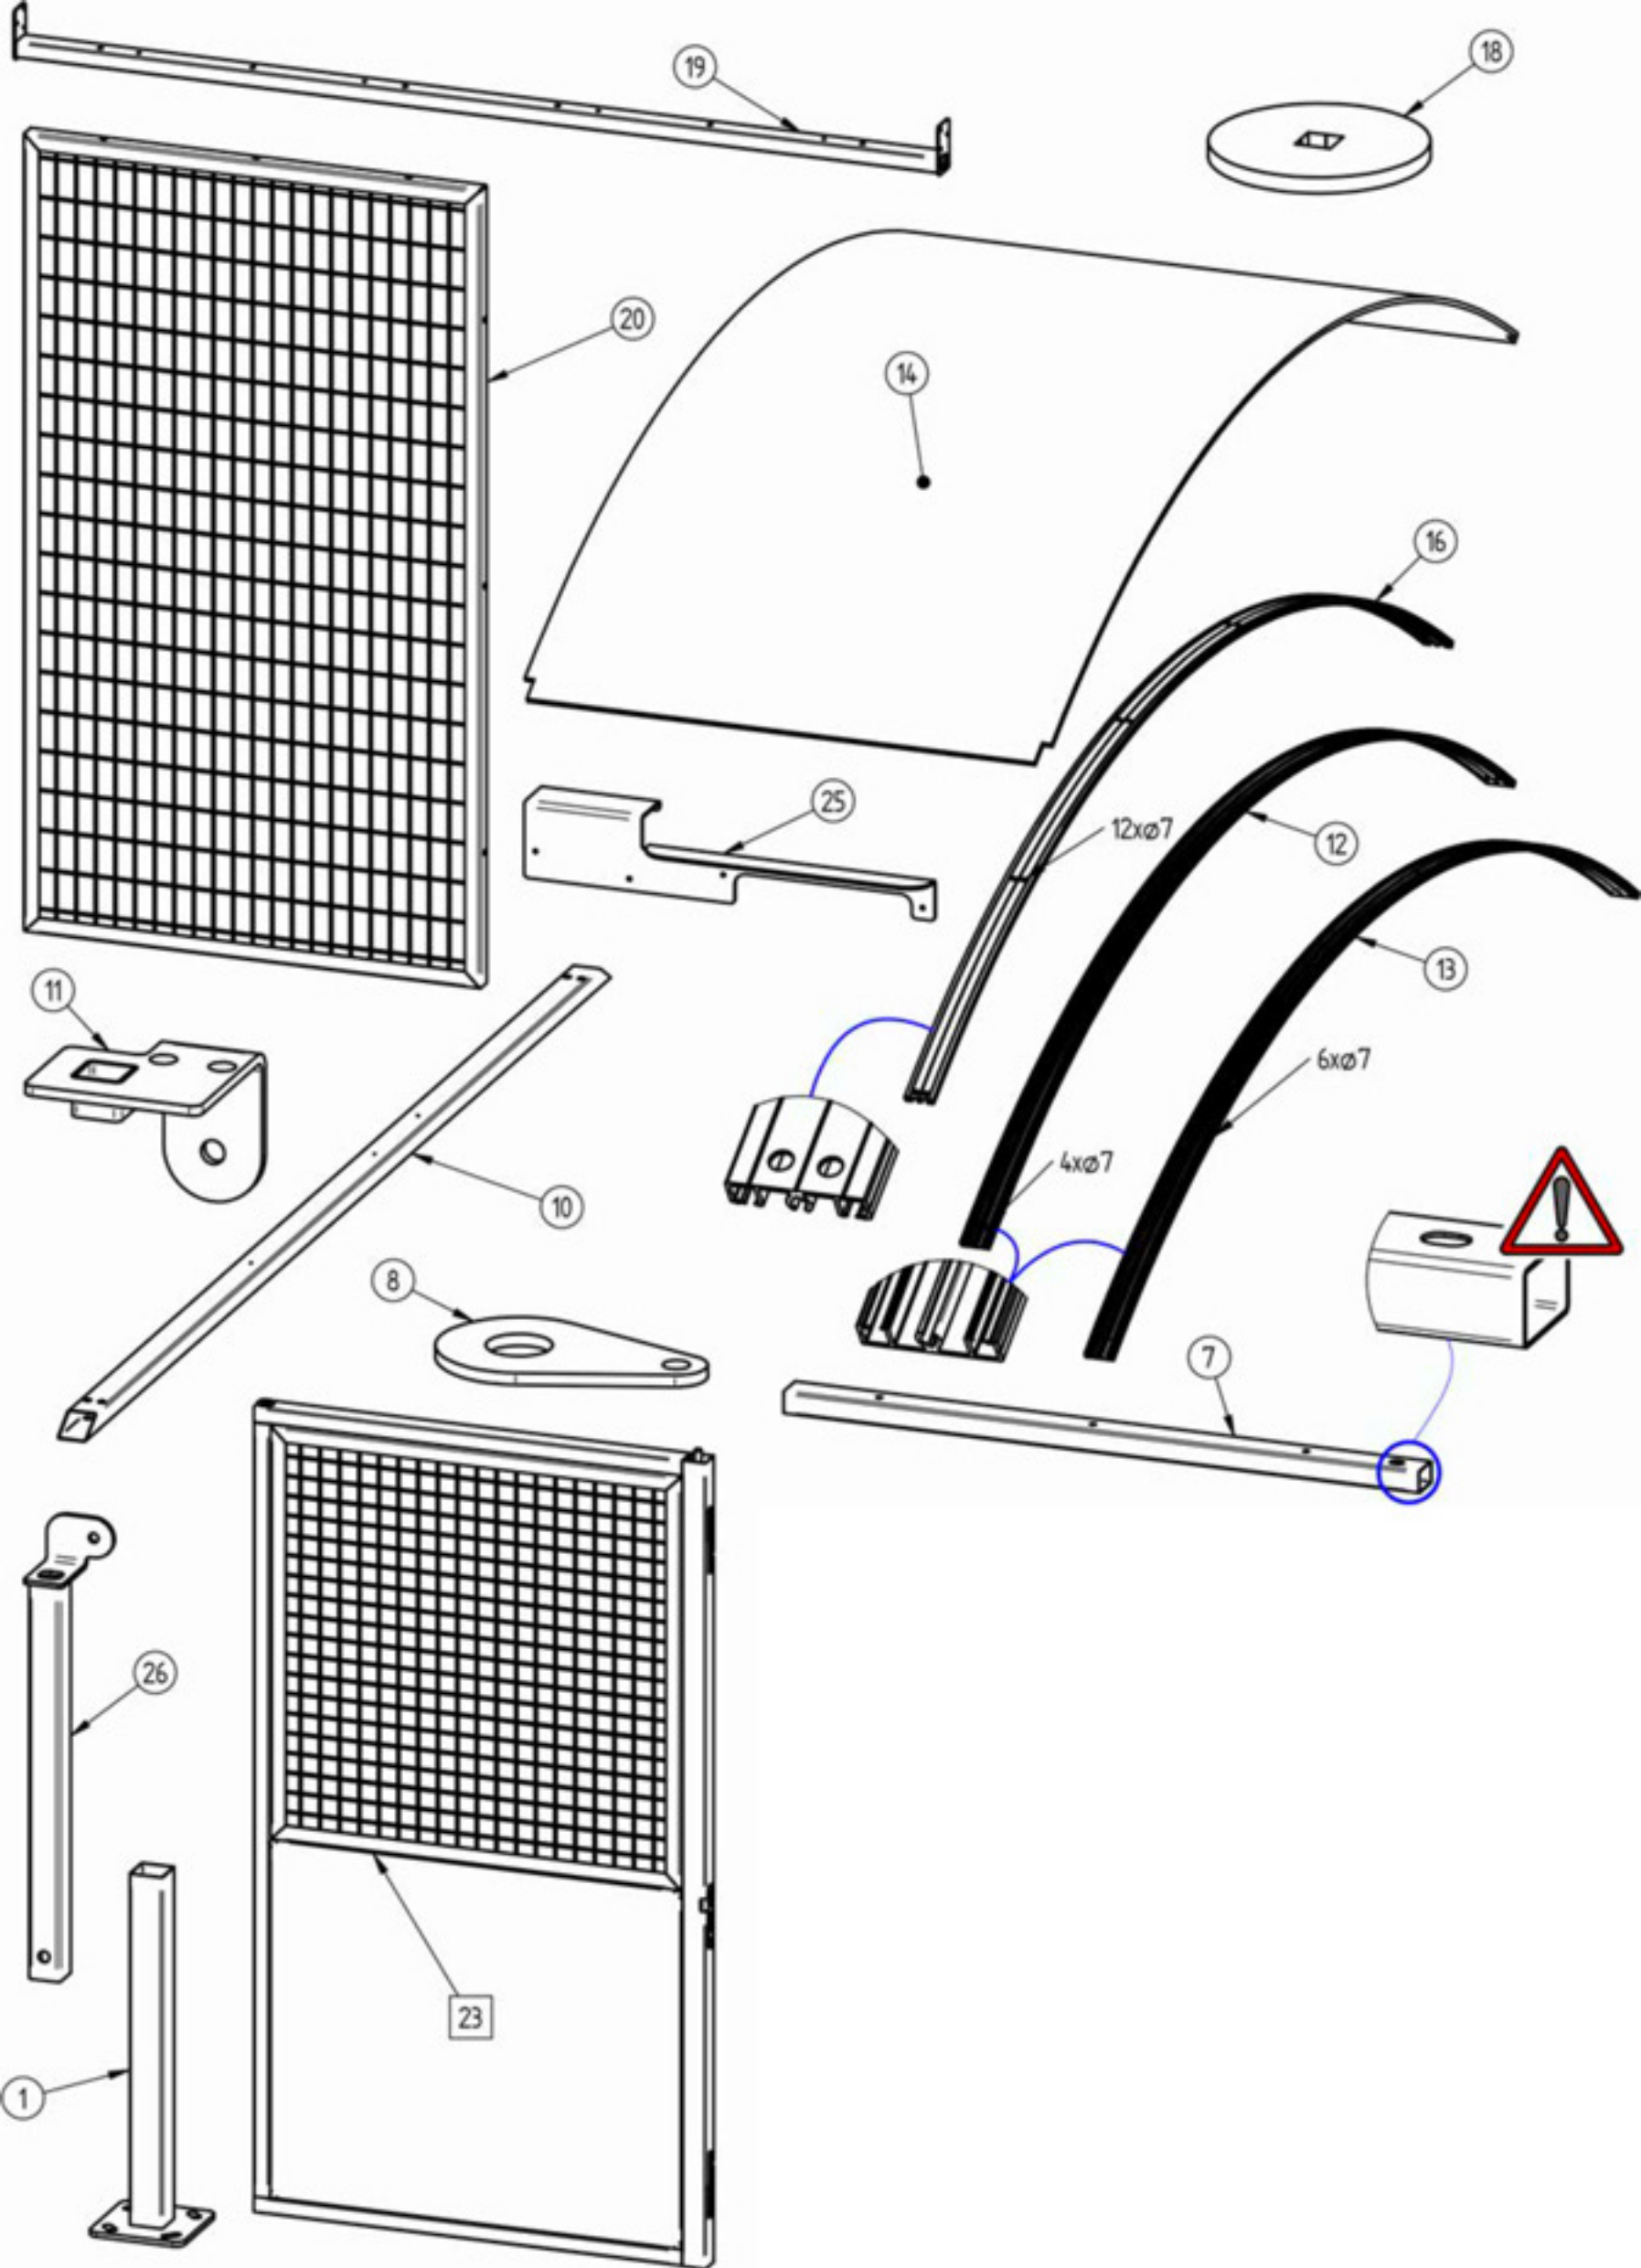
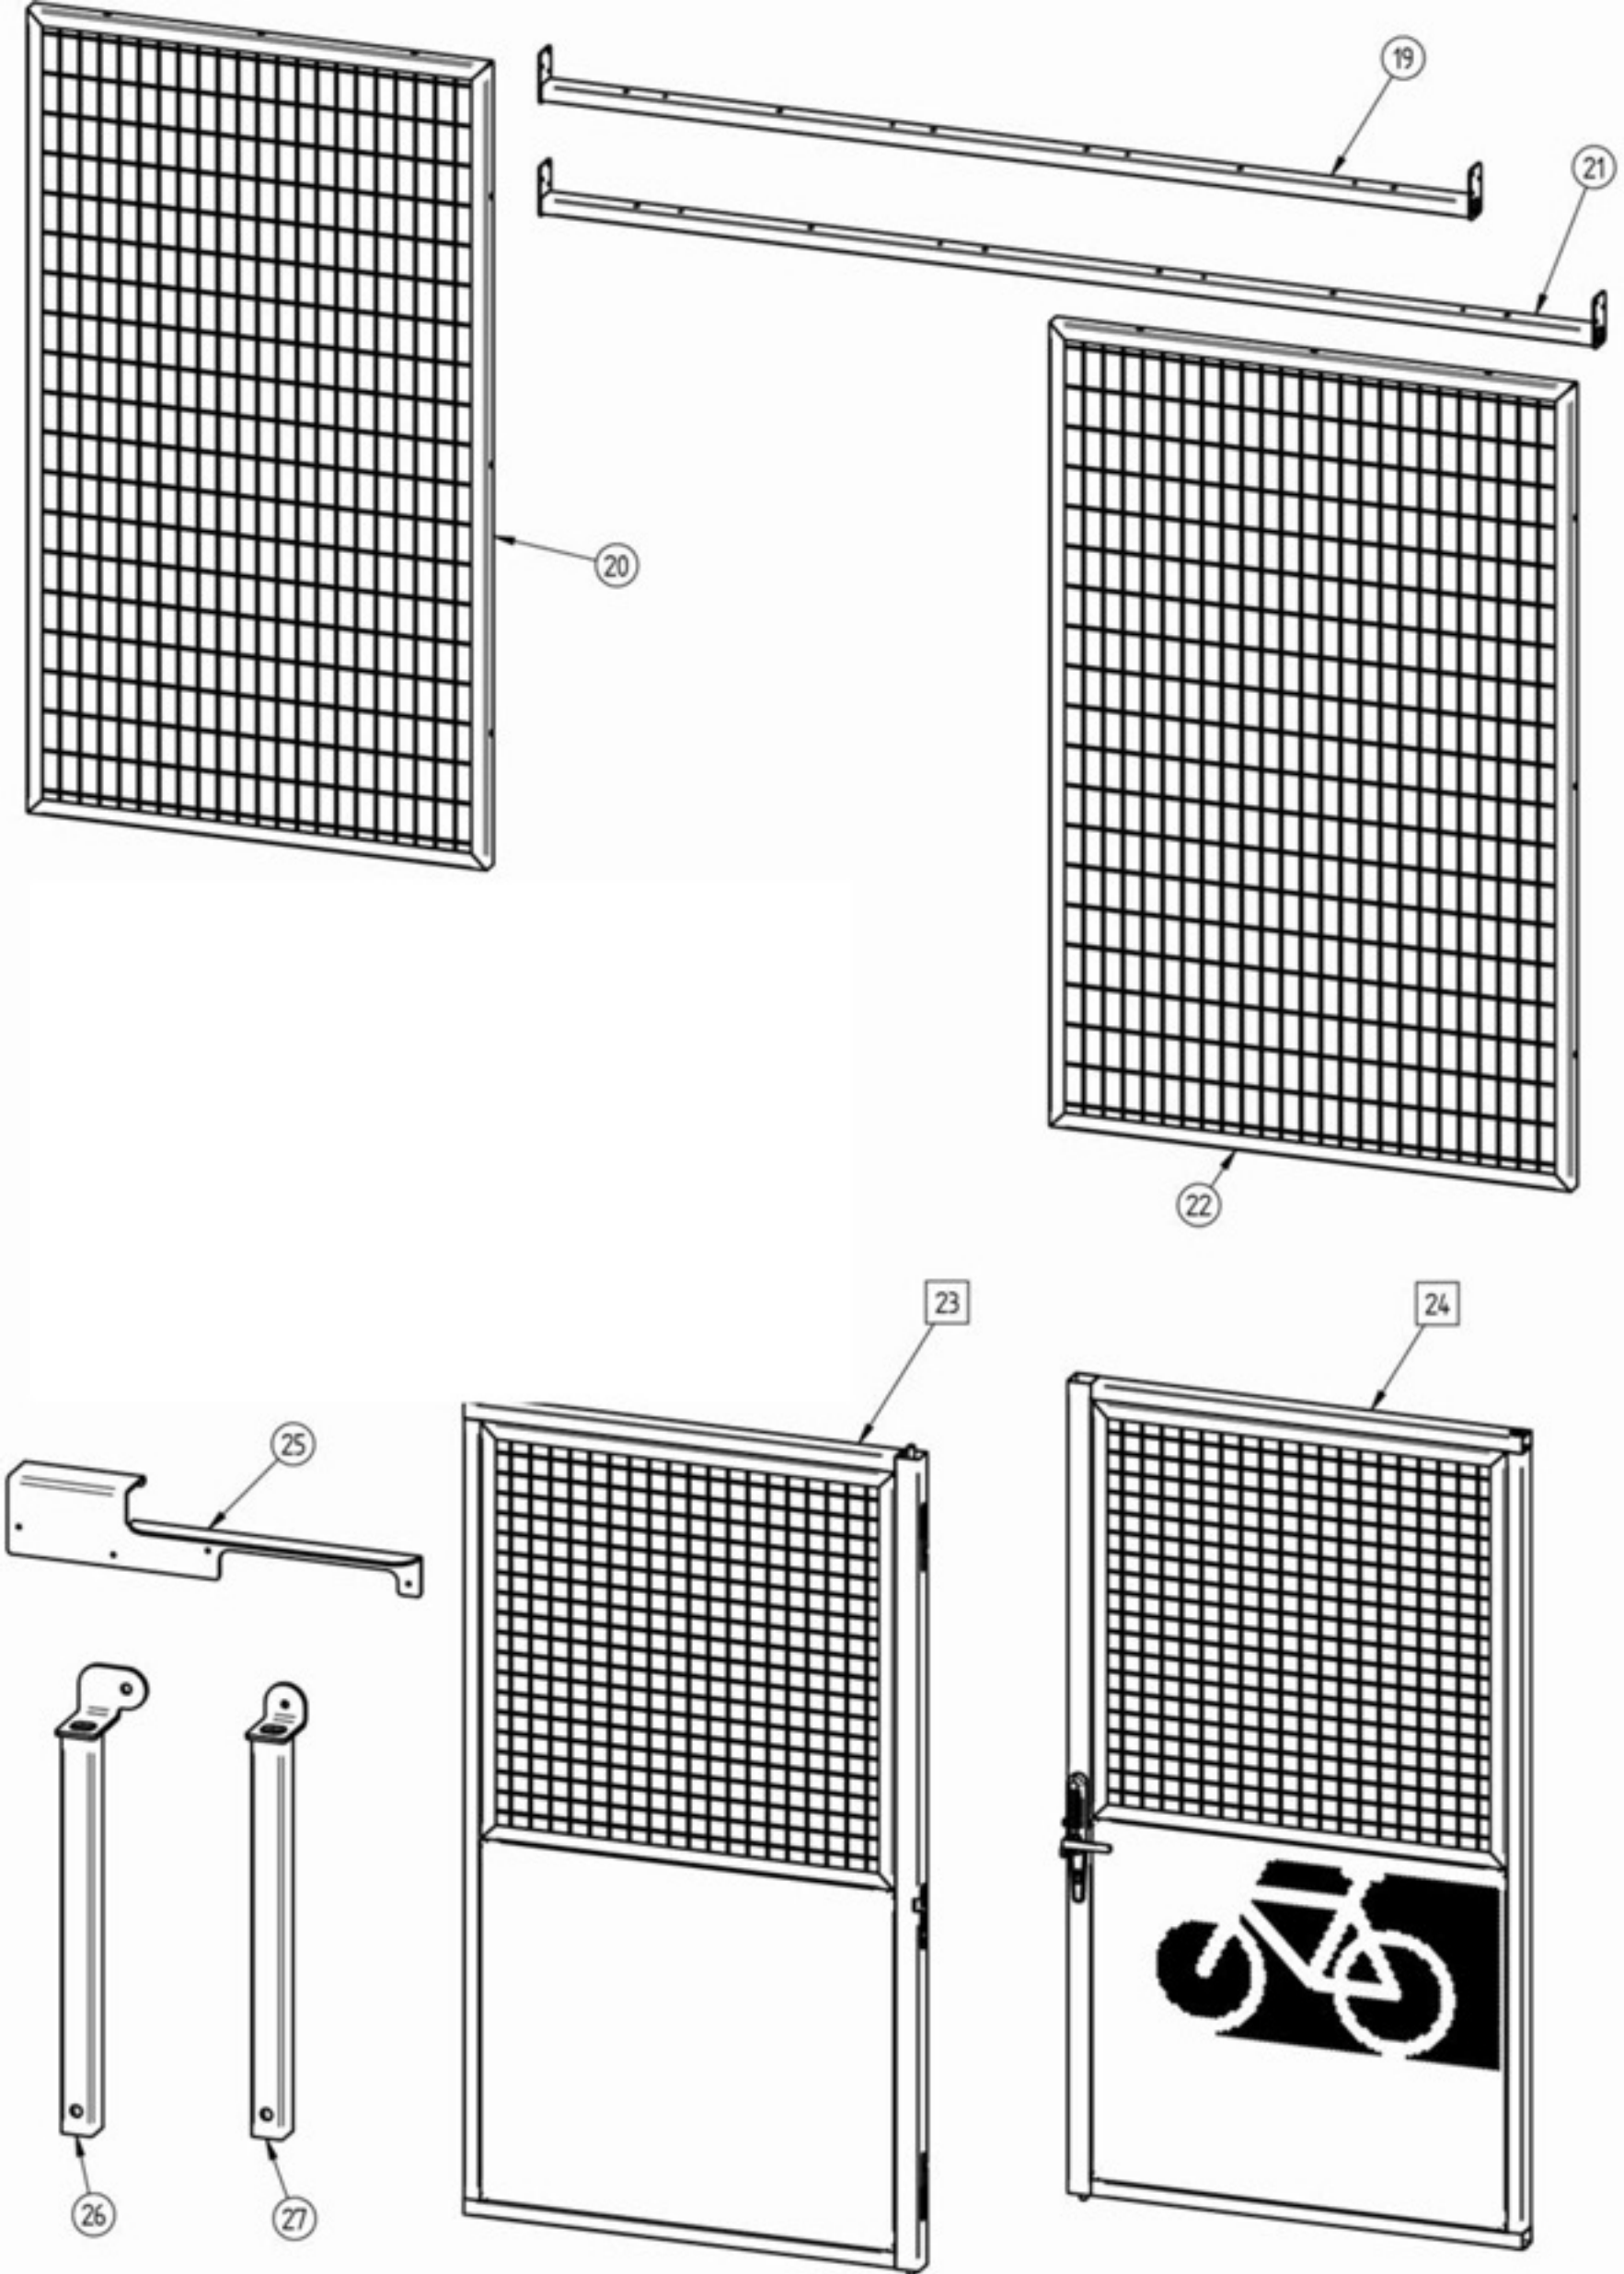
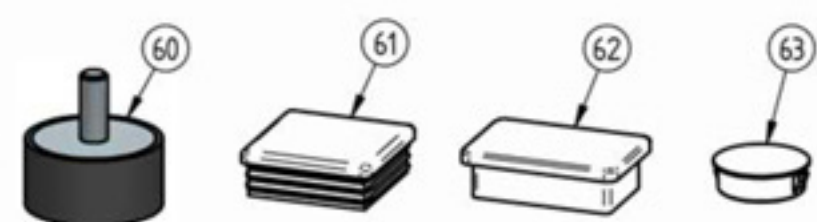
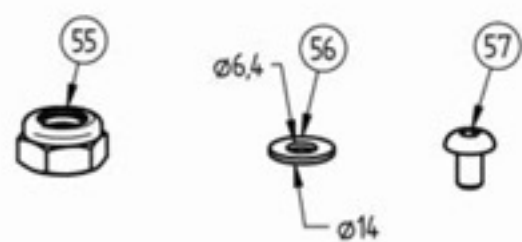



Abri vélo sécurisé

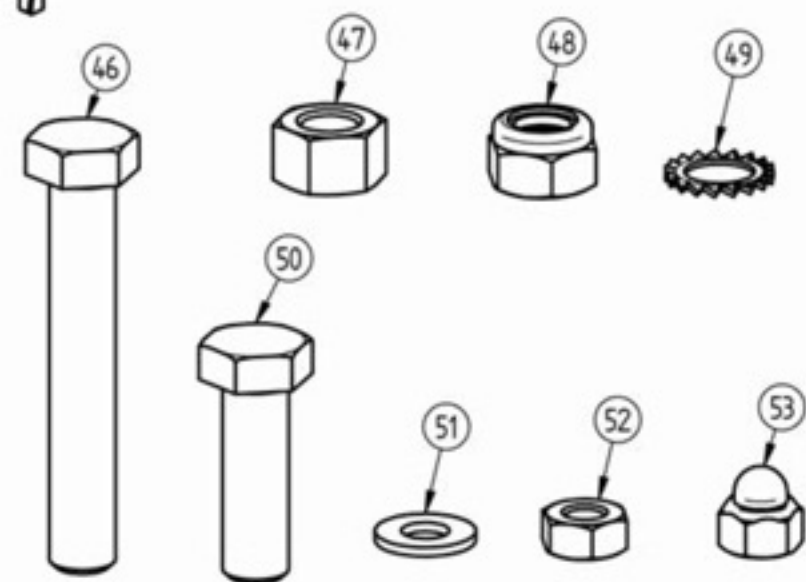

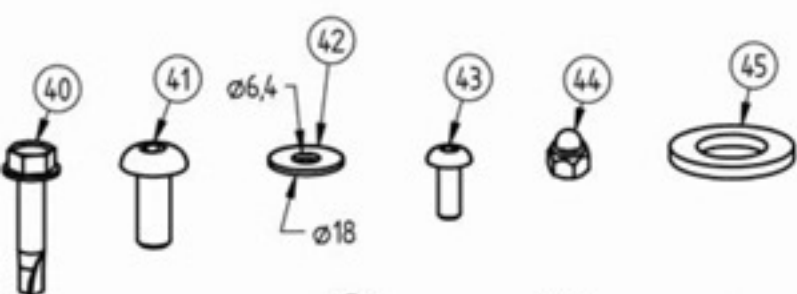


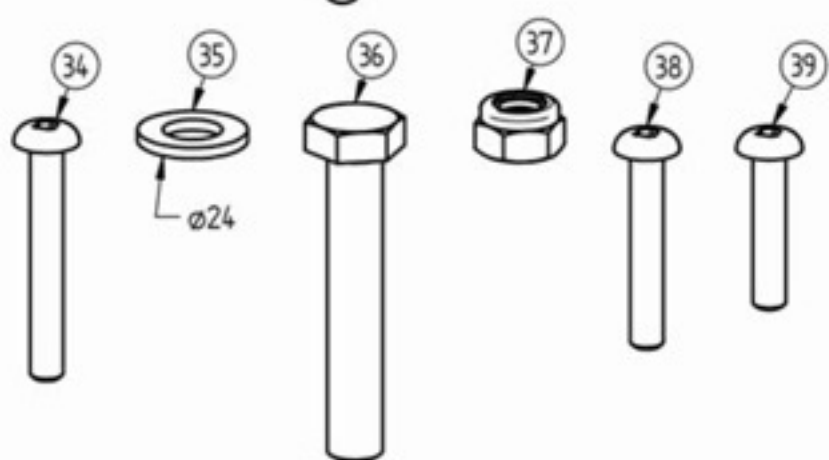

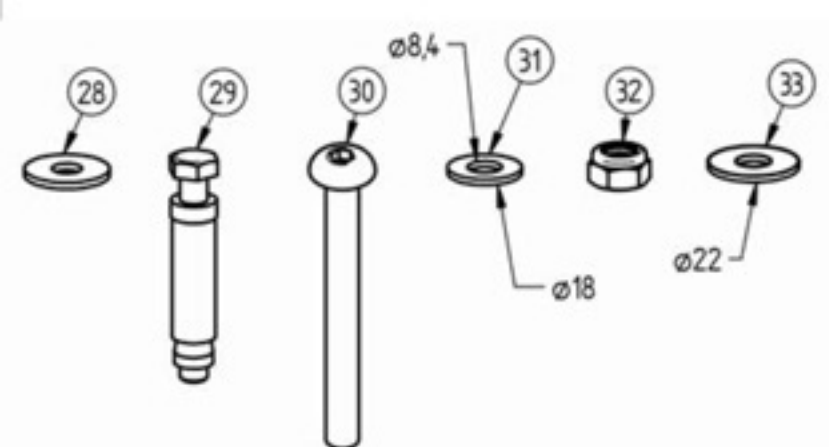

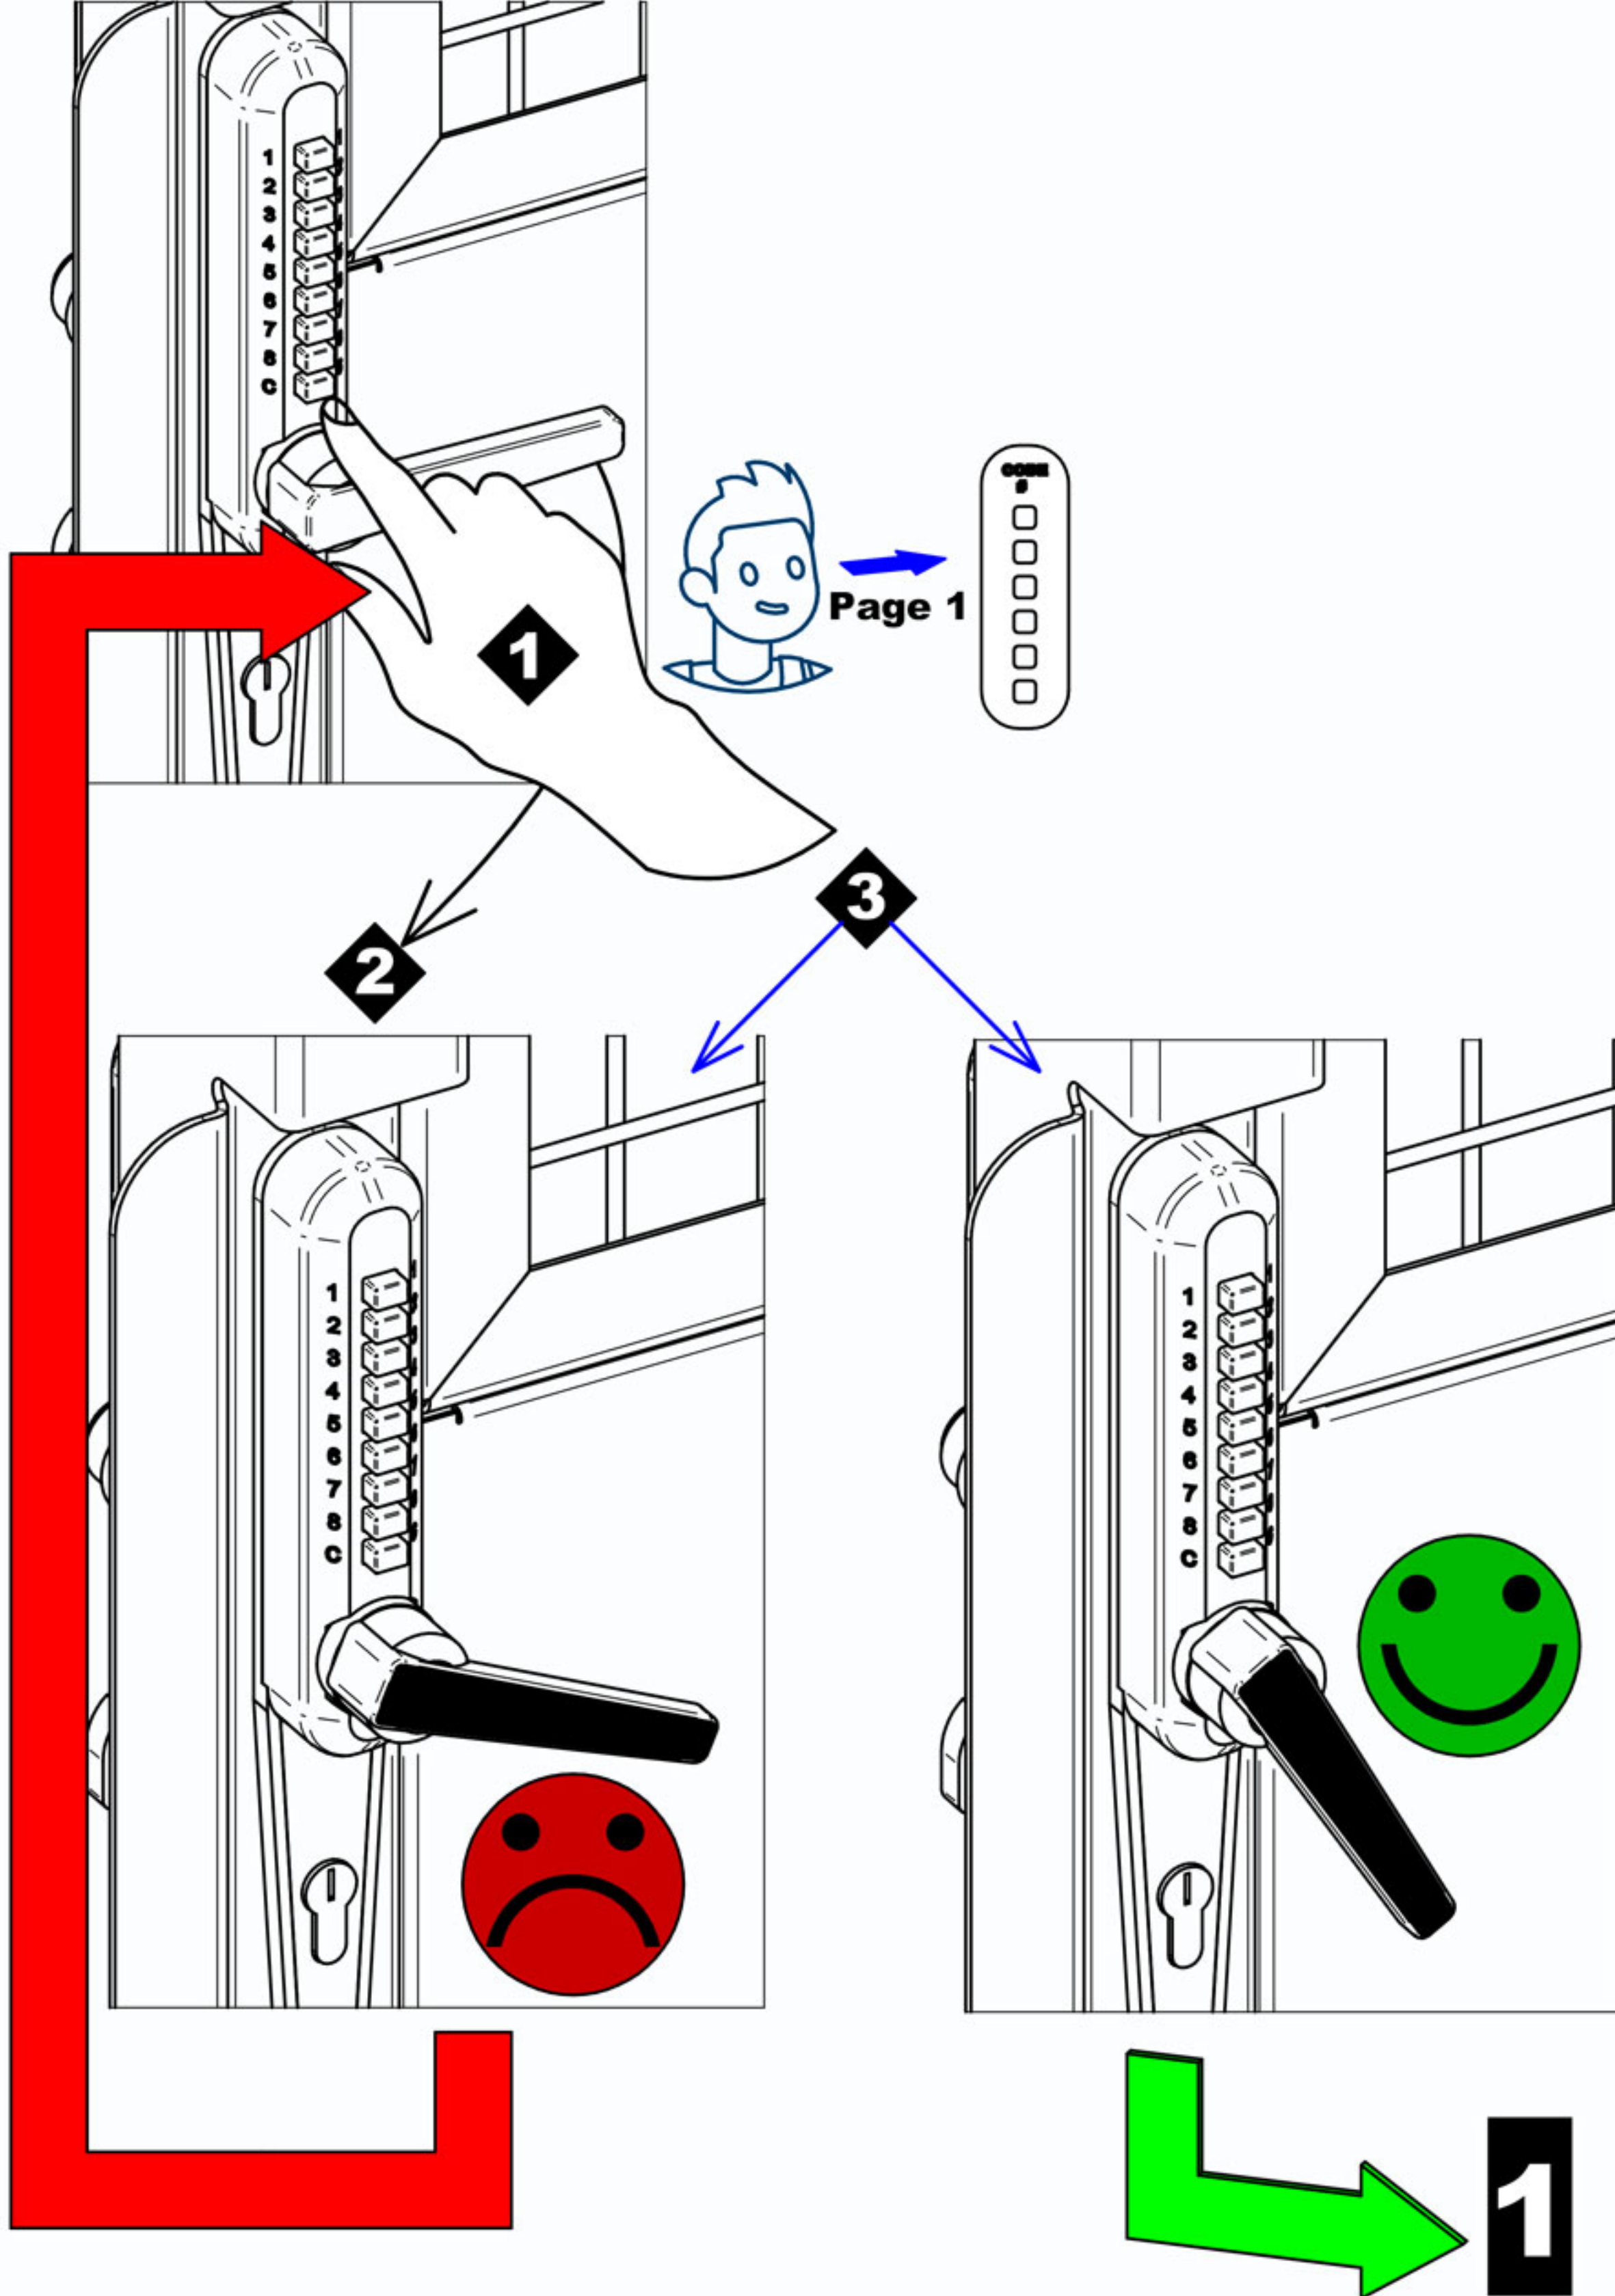

1

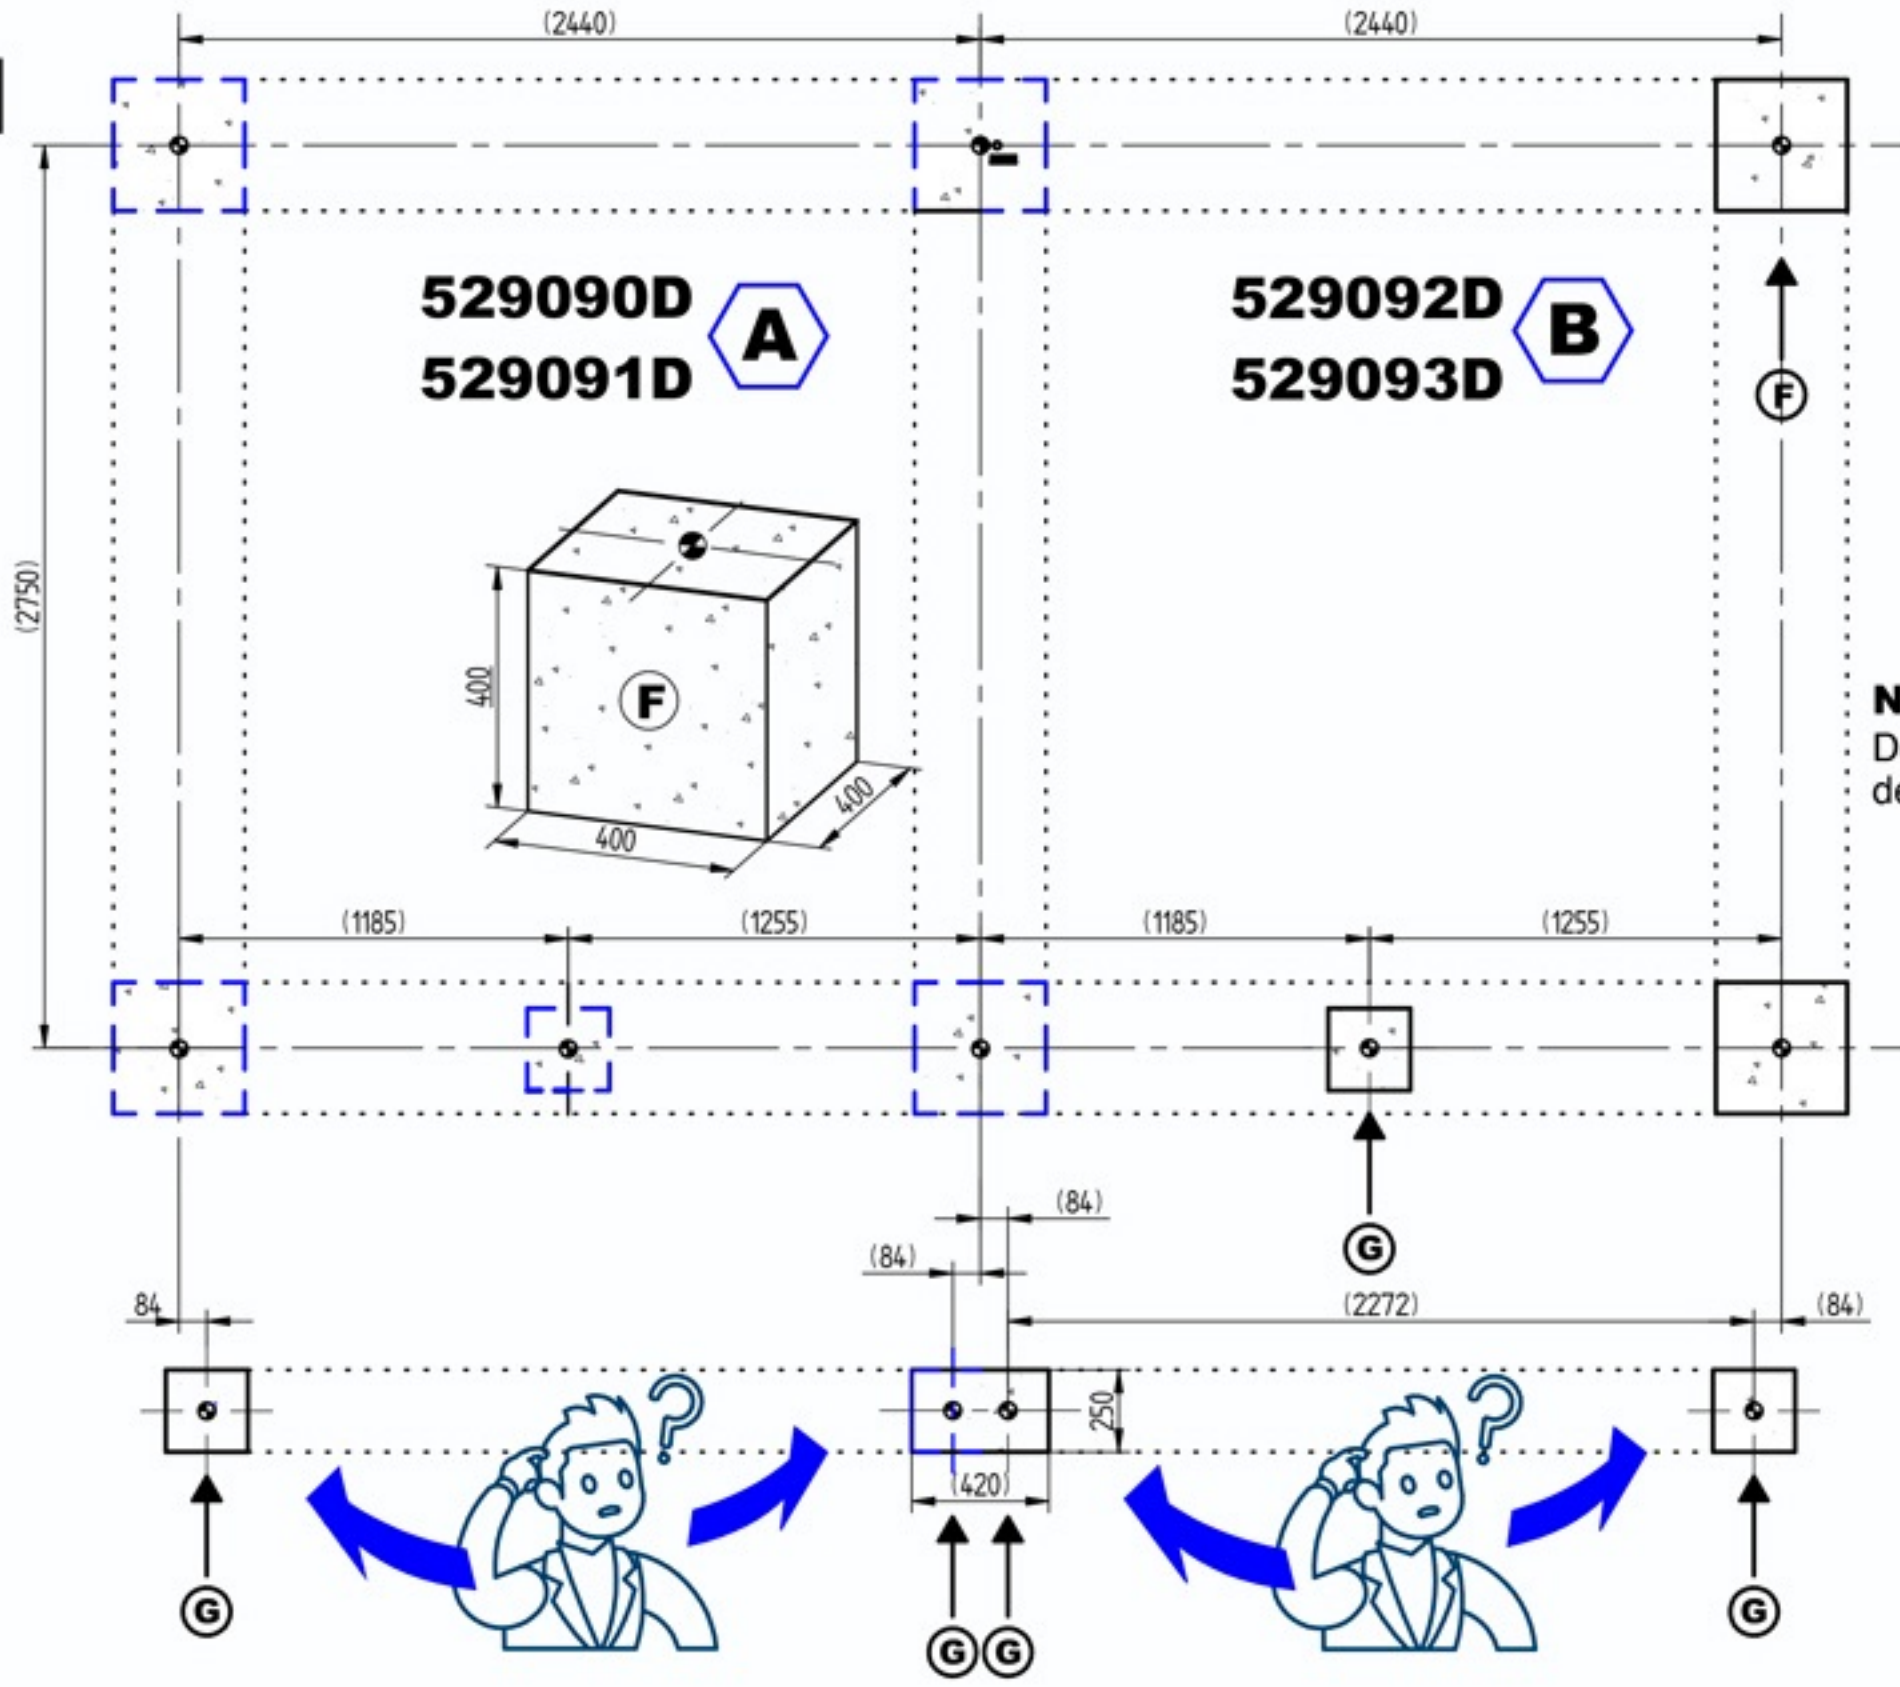

NOTA :
Déterminer l'emplacement
des Butées Ouvertes N° 27 x 2

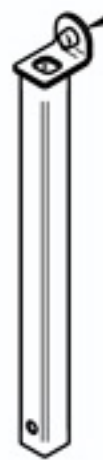


Diagram 2 illustrates the assembly of the frame and motor unit. It shows the installation of vertical posts (2) and horizontal rails (4) using levels to ensure they are square and level. The motor unit (3) is then attached to the frame using a bracket (47) and a nut (45). The motor unit is secured with a screw (49) and a cap screw (50). The diagram also shows the installation of a corner bracket (28) and a corner screw (29) to secure the frame corners. The motor unit is labeled with a torque specification of 50 % N.m.

